How many other companies offer a money-back guarantee on software?

DirectSOFT6 programs the entire DirectLOGIC family

PC-DSOFT6 is our *Direct*LOGIC PLC programming package, with a host of features that make it easier to program your PLC. It supports full-featured 32-bit Windows-based programming for all six *Direct*LOGIC PLC families simultaneously, including all DL05s, DL06s, DL105s, DL205 CPUs, DL305 CPUs, DL405 CPUs, and most of their Koyo cousins. The software supports a wide array of on-line/off-line programming and documentation features, as well as *IBox* instructions.

Packages include:

- PC-DS100/version 6 (FREE):
 DirectSOFT100 programming package;
 programs up to 100 words in any
 DirectLOGIC CPU
- PC-DSOFT6 is the full programming package for all *Direct* LOGIC PLCs with no programming limitations, at one low price \$395.00
- PC-R60-U upgrade to Version 6 with complete *Direct* LOGIC CPU support from any older purchased version \$249.00

Technicians like it when you use our programming and documentation tools

A well-documented program can save thousands of dollars in downtime when something breaks, but not all packages make it easy to document the program. Use our grid-based documentation editor to quickly and intuitively create rung comments, 16-character element nicknames, 6 x 19-character element descriptions, and 16-character wiring labels.

Program over Ethernet

You can program one or multiple *Direct*LOGIC PLCs from one location over an Ethernet network. Just insert an Ethernet card in your PC and an ECOM 100 module in supported DL05, DL06, DL205 and DL405 systems to monitor and program at warp speed! An Ethernet setup wizard leads you through the steps to make the connection to your PLCs.

What's New in **Direct**SOFT6?

- Over 40 new IBoxes available
- · Configurable toolbars
- Extremely fast status updates
- New Trend View feature for monitoring and debugging (seen below)
- Graphic Ladder View
- · Ladder box leg labels
- Graphic Stage View


What else is included?

- IBoxes have packetized fill-in-the-blankstyle instructions that make writing your program faster and easier (certain CPUs and firmware required)
- Tabbed views optimize your viewing area so you see more of what you need to see
- Customizable tool bars give you the flexibility to put what you need where you want it
- Dockable windows give you the ability to relocate views, auto-hide views and even tear them away and place them outside of the *Direct*SOFT6 workspace for full ladder viewing optimization
- Learn many features and software shortcuts with the "Tip of the Day" in DirectSOFT6
- Edit programs as fast as you can move a mouse or use 'hot keys' (even faster)
- Write your program with nicknames instead of data points
- View your program three different ways (RLL, Stage View, Mnemonics). Select the appropriate Tab or view them all on the same screen
- Reduced scan time by scanning only the active stages

- Spreadsheet-style documentation editor makes it super easy to create and edit your program documentation on the fly
- I/O cross-reference and element usage windows keep track of addresses used
- Print Preview to check print formatting
- Print in COLOR
- Open a Data View to examine a status chart of information you select
- PID setup is a snap. Fill-in-the-blanks for alarms, mode, ramp/soak, process variable, setpoint, gain rate, etc.
- PID loop tune and trending screens are standard
- Modem support is a snap since it uses the standard Windows telephony (TAPI) interface to choose modem configuration
- Our drum timers are the easiest to create and edit in the industry
- Programming support for all *Direct*LOGIC

 CPLIC

 CPL
- ASCII in/out and MODBUS instructions for DL06 and D2-260 CPUs
- Support for DL205 local I/O expansion system in D2-250-1, D2-260, and DL-405 CPUs
- Support for LCD instructions in the DL06
 CPU
- Project backup feature and preferences with auto-backup settings for "file freshen" frequency
- Import/export program (mnemonics and rung comments) allows for archiving a program in a single file (txt or CSV) that does not need to be in the form of a DirectSOFT6 file(s) format
- Export to *C-more* operator interface CSV import format (nickname, type, PLC address) to use the same tags in our PLC program and operator interface configuration

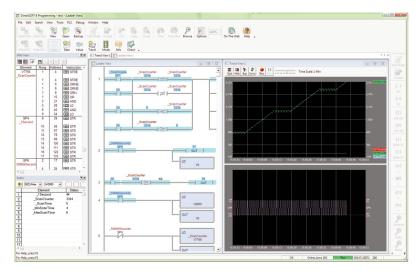

Direct SOFT6 for DirectLOGIC PLCs

DirectSOFT6 makes relay ladder logic easy and fast

We have taken the guesswork out of everyday programming with IBox instructions. The IBox instructions are intelligent modularized instructions that perform simple to complex ladder logic. If you need to set up an Analog card fill in the blanks; If you need to perform a math function on a value type in your formula; select a new preset for your High Speed Counter (CTRIO); even send an e-mail with your ECOM100 Ethernet communications module! Take a minute to view the IBox Instruction Help index to see detailed specifications of each of the 105 instructions, review which CPUs support the Ibox instructions or just get familiar with what they can do for you. Other features include:

- · Point and click or function key editing to suit anyone's programming style
- Customizable Tool Bars for EVERY menu command
- Desktop Themes to allow you to customize your window and tool bar look & feel
- All toolbars can be docked to any border or even floated outside of the *Direct* SOFT window for maximum ladder
- Write your program with nicknames instead of data points
- I/O cross reference and element usage windows keep track of addresses used
- · Set up the D0-DCM for the DL05 & DL06 right from the menu. PLC > Setup > D0-DCM allows you to configure each of the two serial ports, no ladder code required


The 40+ new IBoxes in **Direct**SOFT6 are compatible with DirectLOGIC DL05, DL06, D2-250-1, D2-260, and D4-450 CPUs that have supporting firmware. *IBox* instruction categories include Memory, Discrete Helper, Analog Helper, Math, Communications, and CTRIO.


NOTE: Using Ibox instructions can increase the program size and PLC scan time.


Stage programming keeps the sequence in order

 $\mathsf{RLL}^\mathsf{PLUS}$ Stage programming can help break a control problem into smaller pieces and provide such benefits as:

- Stages divide the ladder program into sections that correspond to the states in a flowchart of your process
- · Stages help make large programs more manageable by giving them some structure
- Reduce scan time by scanning only the active stages

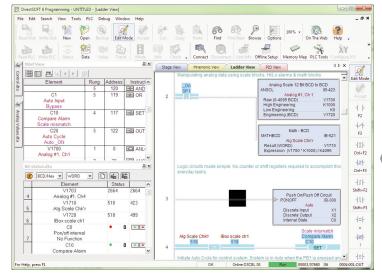

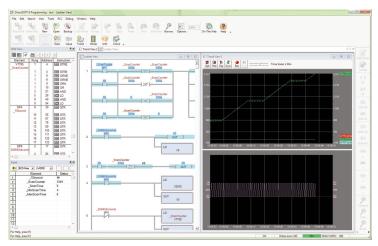

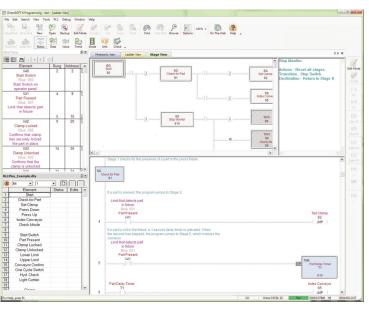

ontrol Systems

CLICK PLC

Do-More T1H

DirectLOGIC DL205

C-More HMI

-More Micro

Other HMI

Direct SOFT6 Packages for DirectLOGIC PLCs

Programming software

PC-DSOFT6 \$395.00 PC-DS100 Free

Overview

Direct SOFT6 Programming Software has been designed to make PLC programming and machine monitoring easier than ever before. The 32-bit Windowsbased package provides simple menu and icon choices that operate similarly to those found in most standard Windows packages. With Direct SOFT6 you can have the power of Windows on the factory floor.

To download our free version, please visit our Web site at:

www.automationdirect.com/directsoft

Which package is right for you?


The programming software packages share the same general features, but there are a couple of key differences:


PC-DSOFT6 programs all six CPU families (DL05, DL06, DL105, DL205, DL305 and DL405).

PC-DS100 is a free, full-feature software package that allows a maximum of 100 words for programming, editing, and downloading. Larger programs can be created and saved but NOT reopened or downloaded without purchasing the full version.

Number of users

The packages listed above are really "single-station" packages. That is, you can legally install them on only one computer. However, if there is only one person who primarily uses the computer (over 80% of the time), then you can install the software on a laptop, home office, or any other single backup computer.

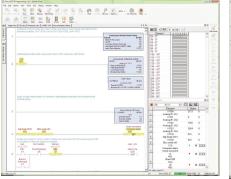

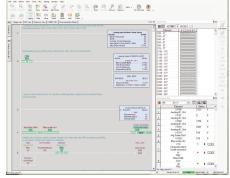

Flexible configuration allows you to customize the look and feel of the software to suit your needs and desires.

Laptop/portable computers and off-site usage

Many of you may be using laptop computers for field service work. This is perfectly acceptable as long as it adheres to the guidelines described previously.

Can I ship a copy to my customer?

No, except for a single backup copy, you cannot make, install, or distribute any additional copies. You can transfer the original copy (original CD, any applicable upgrades, and any documentation) by taking advantage of our Web registration and ownership transfer site.

Of course, this means you cannot legally keep a copy once you have transferred the original.

Maintenance releases


You can receive maintenance releases at no charge by downloading them from our Web site. These often include some minor feature enhancements along with software corrections.

Software upgrades

PC-R60-U \$249.00

Any release that contains major feature enhancements will be subject to the normal upgrade charge in effect at that time. The *Direct*SOFT6 upgrade part number is PC-R60-U.

Note: This upgrade will update any older packages that are already installed on your system to a full programming package with all CPU support.

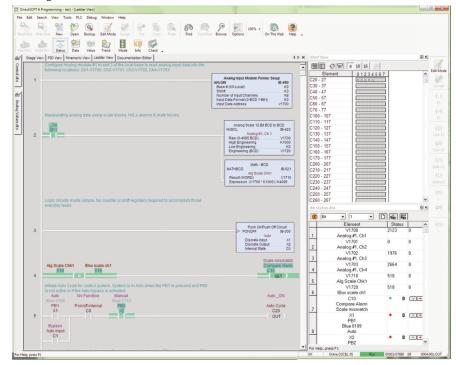

Direct SOFT6 Features

Program editing features

- "Tip of the Day" gives you programming guidance, information on short cuts and tips for taking advantage of features
- Full-screen Point and Click Editing with the mouse and icons
- · Edit Tool Box contains icons and hot key equivalents for all elements
- Browsers help you find proper addresses, contacts, coils, and box instructions
- Windows XP (Home or Pro)/ Vista (all 32-bit and 64-bit versions) /Windows 7/Windows 8/8.1 features fully customizable and tear-off toolbars, Tool Tips, long file names, common file browsers
- Project Information data with each project including creation and save dates, links, PLC type, project description and version, and company/ department/ programmer
- On-screen Cross Reference in a tabbed view that automatically tracks program elements as you browse the ladder view
- On-screen Element Usage in groups of 8, 10, or 16 points per line
- · Predefined aliases for common items, such as timer and counter current values
- · Enter your program with nicknames and assign them to addresses later
- · Access V-memory (Data Registers) with fill-in-the-blank Memory Editor
- · Easily cut and paste single rungs or groups of rungs
- · Cut and paste rungs (with documentation) between programs
- · Search for program elements by name, address, rung number, or instruction type
- Search for constants

Documentation features

- Import/export program mnemonics and rung comments to a text file that does not have to be in Direct SOFT format
- · Export (nickname, type, PLC address) to C-more in CSV format
- Grid-based documentation editor for easy access
- 16-character nicknames for addresses make troubleshooting and programming
- 16-character wiring information allows you to tie PLC addresses to panel wiring numbers
- 6-line x 19-character address description provides more detailed information about the program element
- Rung comments can be up to 20 lines of 70 characters each
- · Cut, copy, and paste documentation between program elements
- · Free-form program title page can be selected at time of printing
- Import/Export feature for all documentation

Printing features

- · Print any available view, including ladders, charts, and mnemonics
- Print multiple columns
- · Use zoom to enlarge or reduce print size
- · Preview the printouts before you send them to the printer
- Create custom printouts by selecting exact items to include for each view
- Print program documentation, including nicknames, descriptions, rung comments, etc.
- · Print program Cross Reference or **Element Usage Table**
- Print PLC V-memory or Data Register contents

Display and viewing features

- Tabbed views allow you to easily switch between views and optimize your viewing area
- View program ladders
- Customizable desktop themes, display colors for editing, unsaved changes, documentation, etc.
- View program mnemonics
- Stage view available for programs created with RLLPLUS instructions
- · Choose rung number or addresses for ladder view
- View multiple programs at the same time
- View multiple screens at once
- Use split screen to view different sections of the same program
- · Use zoom to enlarge or reduce the screen area for better viewing

System setup features

- D0-DCM Setup menu is available for the DL05 and DL06 data communications module
- Set up PID loops with easy-to-use dialog boxes
- Set PLC communication parameters through PC ports, modems, or Ethernet
- Change PLC mode of operation
- · Clear PLC memory by type or all
- Select or change retentive memory
- Read PLC I/O configuration
- · Change I/O configuration (if allowed by the PLC)
- View PLC firmware revisions

features

- instruction list
- projects, links, and applications
- even using modems or Ethernet
- · Visible indication of PLC communication
- condition for program elements, current values for timers and counters, and current values for V-memory or Data Register locations. Event status for Drum steps, outputs, event and/or time transitions, etc.
- · Custom configure Data View windows to monitor various elements
- · Save and store Data View windows by name
- Choose data format for Data View Window display (BCD, binary, Hexadecimal, etc.)
- Change PLC values from Data View
- (Ethernet)

Maintenance and debugging

- program entry
- · Program syntax check
- · Monitor PLC scan time
- Perform PLC I/O diagnostics
- View PLC errors and/or user error messages
- back-up facilities
- · Visually monitor data values using the Trend View feature

Online operation

- Online help system with supported CPU
- · DSLaunch as a central manager for all
- · Automatically build and store communication links to the PLC,
- link status
- Status mode provides visible power flow
- · Display nicknames in Data View
- · Choose status symbol (switch, text, etc.) for discrete points in Data View windows
- View multiple PLCs simultaneously

Automatic error checking during

- · Project user backup and auto

Control Systems Overview

Programming for DirectLOGIC PLCs

Programming versions

With *Direct*SOFT6 Programming Software, selecting which software package you need is a snap! You can select the fully loaded package at its great low price, or you may choose the FREE package. It has all of the same programming functions as the full package. However, it will only download a program up to 100 words long.

The fully-loaded version (PC-DSOFT6) will program all of our *Direct*LOGIC PLCs, some GE Series One Plus PLCs, and Tl305/405 SIMATIC PLCs. Refer to the chart below to verify compatibility.

The FREE **Direct**SOFT6 package (PC-DS100) was designed to provide a more streamlined choice. You can see from the table below that the FREE version has the same support and same great features, but will only allow you to open or download a program up to 100 words long.

Also, you cannot open an offline project larger than 100 words. You can create a project as large as you want and save it to disk, but you cannot reopen or download it to a PLC without purchasing the full version (PC-DSOFT6).

PLC compatibility

If you're using our *Direct*LOGIC products, then compatibility is not an issue. All *Direct*SOFT6 packages support all *Direct*LOGIC CPUs. Our software also supports many compatible products that were offered by previous vendors of the Koyo-designed PLCs. If you're buying the software to program a compatible CPU, check the following table to make sure your CPU is supported. (Sorry, but if your CPU is not shown, then it is not supported.)

Family	CPU	DirectSOFT6 (full version) PC-DSOFT6	DirectSOFT6 (free version) PC-DS100*	CPU Firmware Version Needed to Use IBox Instructions
DL05	All	V	V	✔ CPU v5.10 or Later
DL06	All	V	✓	✓ CPU v2.10 or Later
DL105	All	V	V	
	D2-230	V	V	
	D2-240	V	✓	
DL205	D2-250	V	✓	
	D2-250-1	V	V	✓ CPU v4.60 or Later
	D2-260	V	✓	✓ CPU v2.40 or Later
	D3-330**, D3-330P**	V	✓	
DL305	D3-340	V	✓	
	D3-350	V	✓	
	D4-430	V	✓	
DL405	D4-440	V	✓	
	D4-450	V	V	✓ CPU v3.30 or Later
a=@a : 4 = 1110	IC610CPU105**	V	✓	
GE [®] Series 1 PLUS	IC610CPU106**	V	✓	
	325-07**, PPX:325-07**	V	✓	
TI305™/ SIMATIC [®] Ti305™	330-37**, PPX:330-37**	V	✓	
	325S-07** (or 325 with Stage Kit)	V	✓	
	330S-37**, PPX:330S-37**	V	✓	
	335-37, PPX:335-37	V	✓	
TI405™/ SIMATIC [®] TI405™	425-CPU, PPX:425-CPU	~	✓	
	PPX:430-CPU	✓	✓	
	435-CPU, PPX:435-CPU	V	✓	
Koyo Kostac S-Series	PZ1	V	✓	
	PZ2	V	✓	
	PZ3	V	V	
	SC-4X	V	V	
	SG-8/8B	V	V	
	SL-4	V	V	
	SU-5/5E/5M	V	V	
	SU-6/6B/6H/6M	V	V	
	SZ-3	V	V	
	SZ-4/4M	V	✓	
	TJ-435/435-AS	V	V	

^{*} PC-DS100 is only available by download from our Website. This FREE, full-featured software package will download a program limited to 100 words.

^{**} Requires Data Communications Unit (D3-232-DCU).

Programming for DirectLOGIC PLCs

PC system compatibility

Following are the recommended system requirements for running *Direct*SOFT6 on a PC:

- 1 GHz CPU
- CD/DVD drive OR an Internet connection for loading software
- Windows XP (Home and Pro)/Vista (all 32-bit and 64-bit versions)/Windows 7/Windows 8/8.1 (No DOS, OS/2, MacIntosh, Windows XP 64-bit, LINUX or UNIX versions, or 16-bit versions available)
- 512 MB RAM and 50 MB free hard disk space
- At least one unused serial communications port or USB port using our USB-RS232, USB-to-serial adapter and/or 10-Base-T or 10/100-Base-T Ethernet network card
- Color SVGA monitor (1024 x 768)

 
Laptops: Direct SOFT6 is perfectly suitable for use with laptop computers as long as they meet the requirements shown above. Most laptops can be ordered with a serial port as an option, which will allow a direct connection to our DirectLOGIC PLCs. If your laptop has a USB port, consider using our USB to serial adapter, USB-RS232. If your laptop has an Ethernet port and you are considering a DL05, DL06, DL205 or DL405 PLC, consider using the Hx-ECOM100 Ethernet Communications Module to connect your PC to the PLC (The D2-230 does not support the ECOM). Monitors: Any size monitor will work, however, larger, higher resolution, monitors enhance the

features of DirectSOFT6.



Connecting to DirectLOGIC PLCs





Port 1: 9.6 Kbaud



DL305 CPUs


D3-330 (requires D3-232-DCU): 300 - 19.2 Kbaud D3-340: Port 1/2: 300 baud - 38.4 Kbaud

D3-350: Port 1: 9.6 Kbaud

Port 2: 300 baud - 38.4 Kbaud

DL06 CPUs

Port 1: 9.6 Kbaud Port 2: 300 baud - 38.4K baud

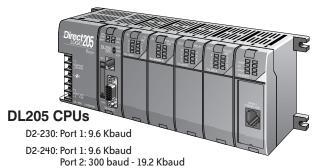

D2-250-1: Port 1: 9.6 Kbaud & D2-260 Port 2: 300 baud - 38.4 Kbaud



&D4-440: Port 2: 300 baud - 19.2 Kbaud

D4-450: Port 0: 9.6 Kbaud

Port 1: 300 baud - 38.4 Kbaud Port 2: 300 baud - 38.4 Kbaud

Or use an Hx-ECOM100 module in the DL05, DL06, DL205 (except D2-230) or DL405 local base to program over a high-speed Ethernet link.

Control Systems Overview

CLICK PLC

PLCs Overvier

Oo-More T1H

DirectLOGIC DL205

C-More HMI

-More Micro

Other HMI

DirectLOGIC PLC Programming Cables

Since CPUs provide many different communication port possibilities, it is helpful to know exactly which communications cable is required. Use the table below to choose the proper cable:

Family	CPU (or other device)	Port	Cable
	All versions	Port 1	D2-DSCBL (EA-MG-PGM-CBL optional)
	All versions	Port 2	D2-DSCBL (EA-MG-PGM-CBL optional)
DirectLOGIC DL05	H0-ECOM / ECOM100 (modules)	Only one	**
	D0-DCM (module)	Port 1	D2-DSCBL (EA-MG-PGM-CBL optional)
	DO-DOM (Module)	Port 2	D2-DSCBL-1
	All	Port 1	D2-DSCBL (EA-MG-PGM-CBL optional)
	All versions	Port 2	D2-DSCBL-1
DirectLOGIC DL06	H0-ECOM / ECOM100 (modules)	Only one	**
	D0-DCM (module)	Port 1	D2-DSCBL (EA-MG-PGM-CBL optional)
	DO-DOM (Module)	Port 2	D2-DSCBL-1
DirectLOGIC DL105	F1-130 (all versions)	Only one	D2-DSCBL (EA-MG-PGM-CBL optional)
	D2-230	Only one	D2-DSCBL (EA-MG-PGM-CBL optional)
	D2-240	Top port	D2-DSCBL (EA-MG-PGM-CBL optional)
	DZ-Z40	Bottom port	D2-DSCBL (EA-MG-PGM-CBL optional)
	D2-250(-1)	Top port	D2-DSCBL (EA-MG-PGM-CBL optional)
DirectLOGIC DL205	D2-230(-1)	Bottom port	D2-DSCBL-1
	D2-260	Top port	D2-DSCBL (EA-MG-PGM-CBL optional)
	D2-200	Bottom port	D2-DSCBL-1
	D2-DCM (module)	Only one	D3-DSCBL-2
	H2-ECOM (-F) / ECOM100	Only one	**
	D3-330/D3-330P	Requires DCU*	D3-DSCBL-2
	D3-340	Top port	D3-DSCBL-1
DirectLOGIC DL305	D3-340	Bottom port	D3-DSCBL-1
DII GULLUAIO DESUS	D3-350	Top port	D2-DSCBL (EA-MG-PGM-CBL optional)
	D3-350	Bottom port	D3-DSCBL-2
	D3-DCM (module)	Only one	D3-DSCBL-2
	D4-430/D4-440	Top port (15-pin)	D4-DSCBL
	D4-430/D4-440	Bottom port (25-pin)	D3-DSCBL-2
		Phone jack	D2-DSCBL (EA-MG-PGM-CBL optional)
DirectLOGIC DL405	D4-450	Top port (15-pin)	D4-DSCBL
DIIGGEOGIO DE403		Bottom port (25-pin)	D3-DSCBL-2
	D4-DCM (module)	Only one	D3-DSCBL-2
	H4-ECOM (-F) / ECOM100	Only one	**
	Slice I/O (module)	Only one	D4-DSCBL
GE [®] Series 1	IC610CPU105/106	Requires DCU*	D3-DSCBL-2
	325-07, PPX:325-07	Requires DCU*	D3-DSCBL-2
	330-37, PPX:330-37	Requires DCU*	D3-DSCBL-2
TMTM	325S-07 (or 325 with stage kit)	Requires DCU*	D3-DSCBL-2
TI305 [™] /SIMATIC [®] TI305 [™]	330S-37, PPX:330S-37	Requires DCU*	D3-DSCBL-2
	335-37, PPX:335-37	Phone jack	D3-DSCBL-1
		If DCU is used*	D3-DSCBL-2
	425-CPU, PPX:425-CPU	If DCU is used*	D4-DSCBL
		Top port (15-pin)	D4-DSCBL
TM @ TM	N/A, PPX:430-CPU	Bottom port (25-pin)	D3-DSCBL-2
TI405 [™] /SIMATIC [®] TI405 [™]		Top port (15-pin)	D4-DSCBL
11100 /0111111110 111100			
77.100	435-CPU, PPX:435-CPU	Bottom port (25-pin)	D3-DSCBL-2

^{*} Requires RS232 Data Communications Unit (D3-232-DCU).

^{**}Requires standard Ethernet twisted pair cable (HX-ECOM) or standard fiber optic cable (HX-ECOM-F).

***The GoldX USB-RS232 adapter is another option for USB communication.

Control Systems Overview

CLICK PLC

Do-More

PLCs Overview

Do-More H2 PLC

Do-More T1H

DirectLOGIC DL205

DirectLOGIC DL305

Productivity 3000

C-More HMI


C-More Micro


Industrial Marquees


Other HMI

DirectLOGIC PLC Programming Cables

Pin labeling conforms to IBM DTE and DCE standards

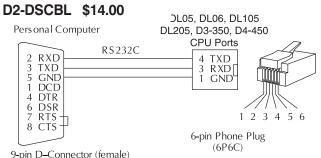

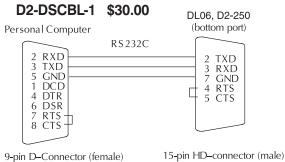

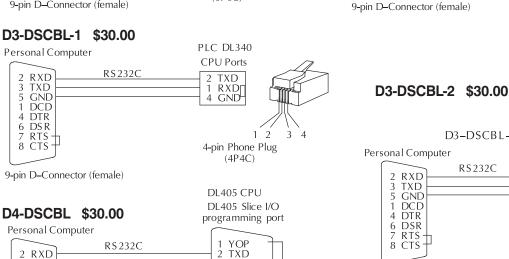



RXD

13 OV 14 OV 15 OV


4 ONLINE 7 CTS 8 YOM

 
15-pin D-Connector (male)



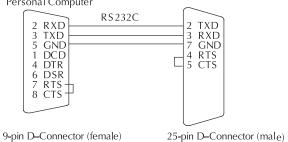

Straight-through Patch Cable (Ethernet)

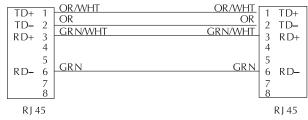

 

Crossover Cable (Ethernet)


TXD

GND

DCD


9-pin D-Connector (female)

4 DTR 6 DSR

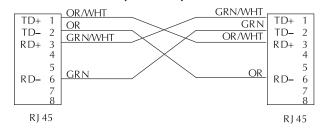

All Ethernet and ECOM patch cables should be Category 5, UTP Cable. The diagram illustrates the appropriate wire position in the RJ 45 connector.

DirectSOFT6 Functions

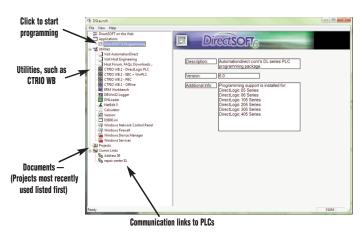


The Launch Window


The Launch Window is a centralized location to view not only all of your *Direct*SOFT6 applications and projects, but also any additional applications such as NetEdit, DN Loader, CTRIO WB, ERM WB, etc. This window is also used to create and manage PLC programs and the communications between your PC and the PLC.

Point and click editing

Once you have started a new project, there are a few different ways to start building your program. The Ladder Palette, which is attached to the right border by default, can be resized and repositioned anywhere on your desktop. This contains most of the instructions you will need. Simply click on the icon or use the Hot Key associated with that icon. Some instructions have to be accessed through one of the Browser icons. The Browsers contain all of the necessary information from various boxes, coils, and contacts. You can now customize the Ladder Palette tool bar to fit your programming style and needs.

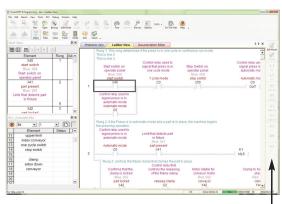

Ladder Palette

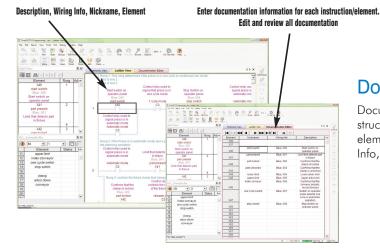

Documentation

Documentation is the text associated with the components and structure of your program. It helps to clarify the representation of elements by assigning four different fields: Description, Wiring Info, Nickname, and Element.

Onscreen views

DirectSOFT6 defaults to a Tab view to give you the most optimized viewing area. You still have the option to view multiple windows in the original "MDI" format by simply hitting the Restore button in the upper right of the active tabbed window, or go to Windows menu and select one of the tile or cascade options. You can have multiple windows open to view such things as all of the addresses used in the program, a mnemonic view of the program instructions, and all of the instructions used.



Control Systems

CLICK PLC

Oo-More LCs Overvier

Do-More H2 PLC

Do-More T1H

DirectLOGIC DL205

DirectLOGIC DL405

Productivity 3000


C-More HMI

C-More Micro

Other HMI


Communication

DirectSOFT6 Functions

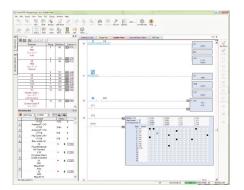


Support for drum instructions

If your PLC supports Drum instructions, you will like this feature of the programming software. Simply fill in the top of the drum with outputs and configure each step with an event and/or time-based element. Then click on the output boxes to choose the proper output states for each step and you are finished.

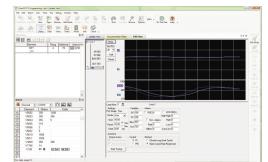

PID view

DirectSOFT6 offers an excellent PID feature. The loop and trending screens are very easy to configure. This feature has all of the views, trending, and tuning that you need to easily and successfully set up your PID loop.

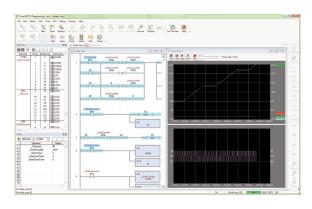

Trend view

Direct SOFT6 contains a new debugging tool called Trend View. Trend View is used to visually monitor the values of DL controller data elements over time. The Trend View can monitor any readable numeric location, any readable bit location or any constant value.

I-Box Instructions

IBox instructions are parameterized fill-in-the-blank instructions designed to make your programming experience quicker and easier than ever before. Within these IBoxes you will find some complicated and some simple, everyday ladder code tasks made easy and fast. There are 6 categories, including Memory, Discrete Helper, Analog Helpers, Math, Communications & Counter I/O, with 105 instructions to choose from. Here are a few examples of IBox instructions in DirectSOFT6 ...

MOVER - Copies a 32-bit floating point number that is stored in two consecutive V-Memory locations to the specified location which is also two consecutive V-Memory location

OFFDTMR - Off Delay Timer will delay the "turning off" of the Output parameter by the specified Off Delay Time

ABSR - Returns the absolute value of the Real (floating point) number found in the specified V-Memory locations

ANLGCMB - Analog Input/Output Combo Module Pointer Setup generates the logic to configure the pointer method for one analog input/output combo module on the first PLC scan following a Program to Run transition.

MATHBCD - Math - BCD Format lets you enter complex mathematical expressions like you would in Visual Basic, Excel, or C++



√X ⋈		0		
Off Delay Timer				
OFFDTMR		IB-302		
Timer Number	TO	•		
Off Delay Time (0.01 sec)	K0	•		
Output	C0	•		

√ XX		0
Absolute V	alue Real	
ABSR		IB-544
Value (REAL DWORD)	V2054	*
Result (REAL DWORD)	V2056	•

✓ ×∞	•
Analog Input/Output Combo Mo	dule Pointer Setup
ANLGCMB	IB-462
Base # (K0-Local)	K0 *
Slot#	K1 *
Number of Input Channels	K1 •
Input Data Format (0-BCD 1-BIN)	K0 *
Input Data Address	V200 *
Number of Output Channels	K1 •
Output Data Format (0-BCD 1-BIN)	K0 •
Output Data Address	V200 *

