


## MPW18 Manual Motor Protector - Overview

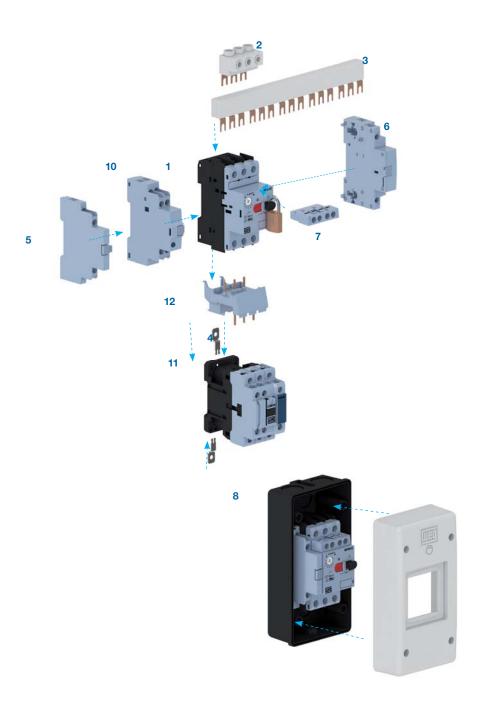

- 1 MPW18 motor protective circuit breaker (screw terminal)
- 2 Feeder terminal FTBBS
- 3 Three-phase busbars BBS
- 4 Push-in-lugs PLMP
- 5 Side mounted auxiliary contact block ACBS (screw terminal)
- 6 Undervoltage release URMP or shunt release SRMP (screw terminal)
- 7 Front mounted auxiliary contact block ACBF (screw terminal)
- 8 Insulated enclosure PE66GN

- 9 Scale cover SCMP
- 10 Trip signaling block TSB
- 11 CWB9...38 contactors
- 12 Link module ECCMP-18B38 (MPW18+CWB9...38)