


MPW40 Manual Motor Protector - Overview

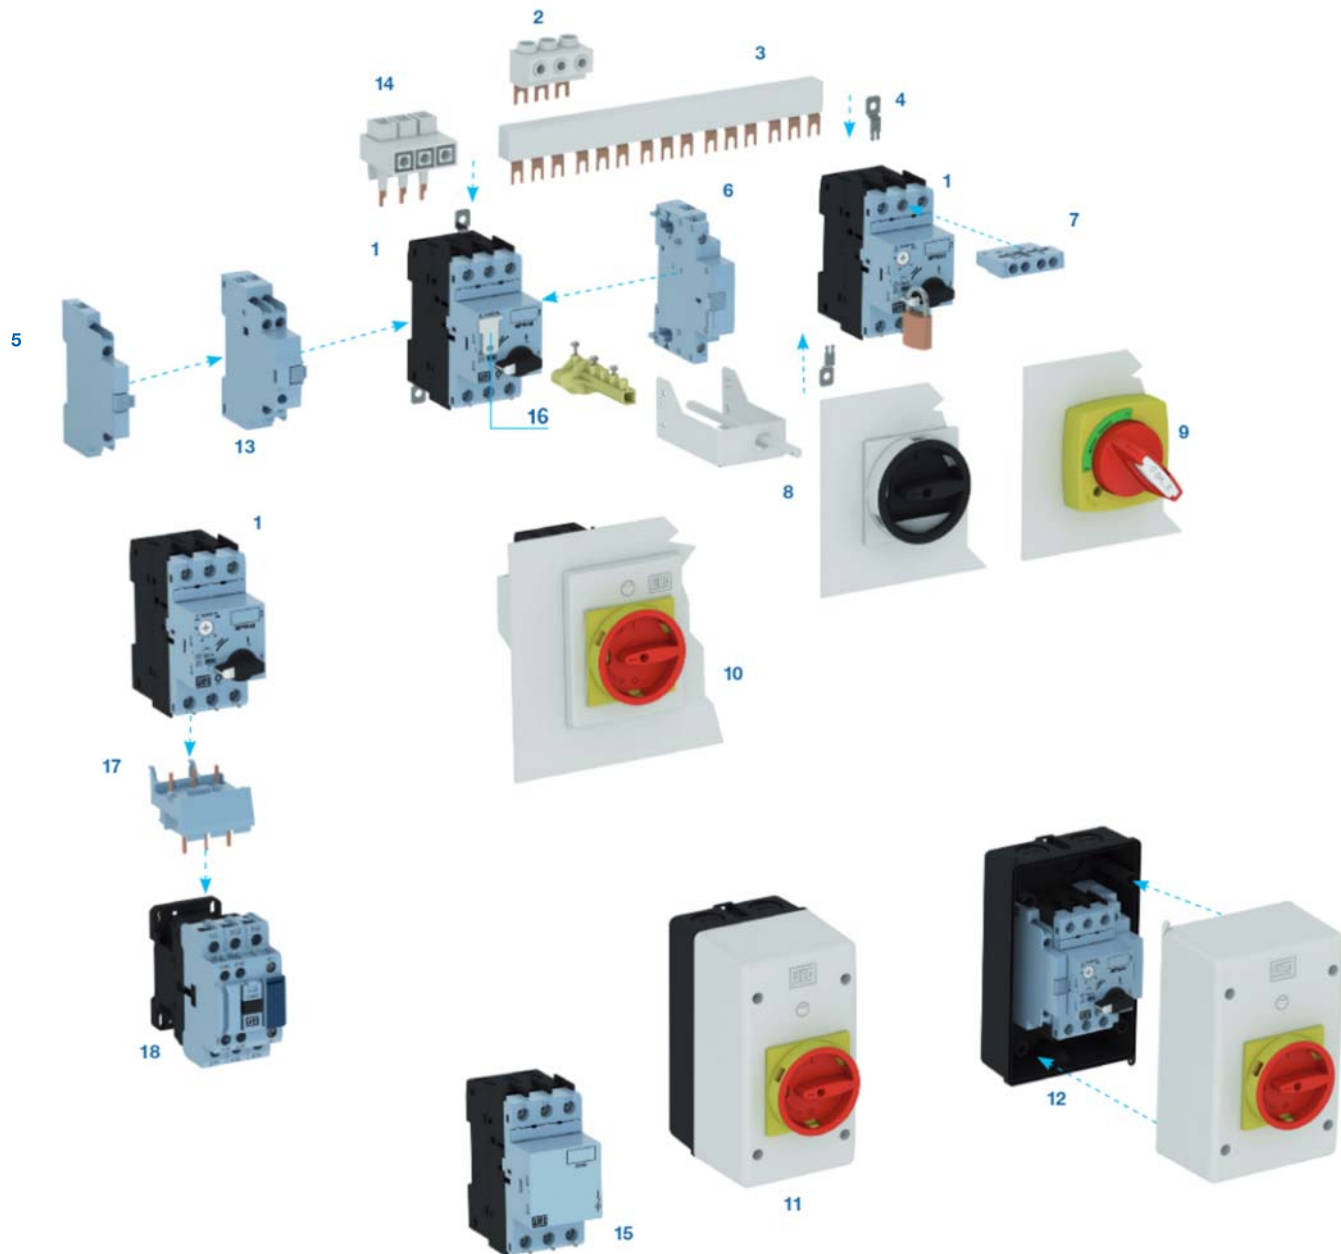

- 1 - MPW40 motor protective circuit breaker (screw terminal)
- 2 - Feeder terminal FTBBS
- 3 - Three-phase busbars BBS
- 4 - Push-in-lugs PLMP
- 5 - Side mounted auxiliary contact block ACBS (screw terminal)
- 6 - Undervoltage release URMP or shunt release SRMP (screw terminal)
- 7 - Front mounted auxiliary contact block ACBF (screw terminal)
- 8 - Door coupling rotary handle RMMP
- 9 - Door coupling rotary handle MRX

- 10 - Front plate FME55
- 11 - Standard insulated enclosure PE55GN-E
- 12 - Large insulated enclosure LPE55GN-3
- 13 - Trip signaling block TSB
- 14 - LST25 - Feeder terminal for "Type E" motor starter according to UL
- 15 - Current limiter CLT MPW40
- 16 - Scale cover SCMP
- 17 - Link module ECCMP-40B38 (MPW40+CWB9...38)
- 18 - CWB9...38 contactors