
For current \$AUD visit www.directautomation.com.au

Analog Input Modules

P3-16AD-1 \$535.00

Current Analog Input

The P3-16AD-1 Current Analog Input Module provides sixteen channels for receiving current sinking 0 to 20mA input signals.

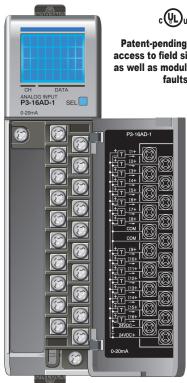

c(VL)us (€

Patent-pending LCD gives access to field signal values, as well as module and signal faults.

> **Terminal block sold** separately; terminal block cover included with module.

WARNING: Explosion hazard – Substitution of components may impair suitability for Class I, Division 2.

Removable Terminal Block Specifications			
Description Part No. <u>P3-RTB</u> ; 20 screw terminals			
Wire Range 22–14 AWG (0.324 to 2.08 sq. mm) Solid / stranded conductor 3/64 in. (1.2 mm) insulation maximum USE COPPER CONDUCTORS, 60°C or equivalent.			
Screw Driver Width	1/4 inch (6.5 mm) maximum		
Screw Size	M3 size		
Screw Torque	Field terminals - 7–9 in·lb (0.882–1.02 N·m) Self-jacking screws - 2.7–3.6 in·lb (0.3–0.4 N·m). Do not overtighten screws when installing terminal block.		

We recommend using prewired **ZIP**Link cables and connection modules. See Wiring Solutions.

Terminal block cover included. If you wish to hand-wire your module, a removable terminal block is sold separately. Order part number P3-RTB.



Input S	Input Specifications			
Input Channels	16 sinking			
Module Signal Input Range	0–20mA			
Signal Resolution	16-bit			
Resolution Value of LSB (least significant bit)	0–20mA = 0.305µA per count (1 LSB = 1 count)			
Data Range	0-65535 counts			
Input Type	Single-ended (1 common)			
Maximum Continuous Overload	±31mA			
Input Impedance	250Ω ±0.1% ¼W			
Filter Characteristics	Low Pass, -3dB @ 100Hz			
Sample Duration Time	7ms per channel (does not include ladder scan time)			
All Channel Update Rate	112ms			
Open Circuit Detection Time	Zero reading within 1s			
Conversion Method	Successive approximation			
Accuracy vs. Temperature	±25PPM / °C maximum			
Maximum Inaccuracy	0.1% of range (including temperature drift)			
Linearity Error (end to end)	±10 LSB maximum (±0.015% of range) Monotonic with no missing codes			
Input Stability and Repeatability	±10 LSB			
Full Scale Calibration Error (not including offset)	±10 LSB maximum (±0.015% of range)			

±10 LSB maximum

Edison S500-32-R, 0.032 A fuse

24VDC (-20% / + 25%) 20mA

-76dB, ±10 LSB

Offset Calibration Error

Recommended Fuse (external)

External DC Power Required

Max Crosstalk

Please note: \$US prices shown


Osnoval Osnoviliasticus				
Ger	General Specifications			
Operating Temperature	0°C– 60°C (32°F–140°F),			
Storage Temperature	-20°C-70°C (-4°F-158°F)			
Humidity	5 to 95% (non-condensing)			
Environmental Air	No corrosive gases permitted			
Vibration	IEC60068-2-6 (Test Fc)			
Shock	IEC60068-2-27 (Test Ea)			
Field to Logic Side Isolation	1800VAC applied for 1s			
Insulation Resistance	>10MΩ @ 500VDC			
Heat Dissipation	2.1 W			
Enclosure Type	Open equipment			
Module Keying to Backplane	Electronic			
Module Location	Any I/O slot in any local, expansion, or remote base in a Productivity3000 system.			
Field Wiring	Removable terminal block (not included). Use ZIP Link wiring system or optional terminal block. See Wiring Solutions.			
Terminal Type (not included)	20-position removable terminal block			
Weight	105g (3.73 oz)			
Agency Approvals	UL508 file E157382, Canada & USA UL1604 file E200031, Canada & USA CE (EN61131-2*) This equipment is suitable for use in Class 1, Division 2, Groups A, B, C and D or non-hazardous locations only.			

^{*}Meets EMC and Safety requirements. See the Declaration of Conformity for details.

Analog Input Modules


P3-16AD-1 (cont'd)


Wiring Diagrams

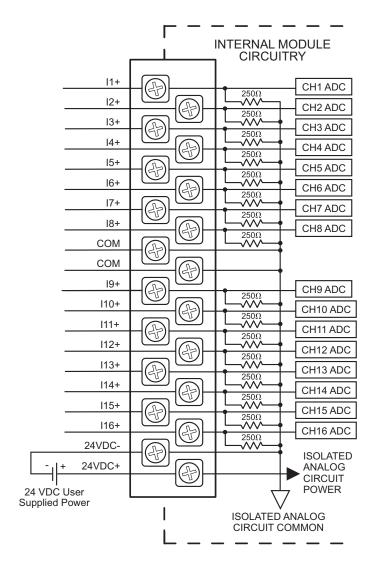


Current Input Circuits

An Edison S500-32-R 0.032A fast-acting fuse is recommended for current loops.



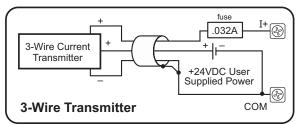

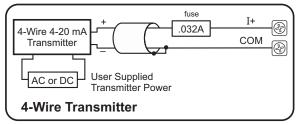

Note: Do not connect both ends of shield.



Wiring Solutions

Wiring Solutions using the **ZIP**Link wiring system

ZIPLinks eliminate the normally tedious process of wiring between devices by utilizing prewired cables and DIN rail mount connector modules. It's as simple as plugging in a cable connector at either end or terminating wires at only one end. Prewired cables keep

installation clean and efficient, using half the space at a fraction of the cost of standard terminal blocks. There are several wiring solutions available when using the **ZIP**Link System ranging from

PLC I/O-to-**ZIP**Link Connector Modules that are ready for field termination, options for connecting to third party devices, GS, DuraPulse and SureServo Drives, and specialty relay, transorb and communications modules. Pre-printed I/O-specific adhesive label strips for quick marking of **ZIP**Link modules are provided with **ZIP**Link cables. See the following solutions to help determine the best **ZIP**Link system for your application.

Solution 1: Productivity Series I/O Modules to ZIPLink Connector Modules

When looking for quick and easy I/O-to-field termination, a **ZIP**Link connector module used in conjunction with a prewired **ZIP**Link cable, consisting of an I/O terminal block at one end and a multi-pin connector at the other end, is the best solution.

Using the PLC I/O Modules to **ZIP**Link Connector Modules selector tables located in this section,

- 1. Locate your I/O module/PLC.
- 2. Select a **ZIP**Link Module.
- 3. Select a corresponding **ZIP**Link Cable.



Solution 2: Productivity Series I/O Modules to ZIPLink Connector Modules

When wanting to connect I/O to another device within close proximity of the I/O modules, no extra terminal blocks are necessary when using the **ZIP**Link Pigtail Cables. **ZIP**Link Pigtail Cables are prewired to an I/O terminal block with color-coded pigtail with soldered-tip wires on the other end.

Using the I/O Modules to 3rd Party Devices selector tables located in this section,

- 1. Locate your PLC I/O module.
- 2. Select a **ZIP**Link Pigtail Cable that is compatible with your 3rd party device.



Solution 3: GS Series and DuraPulse Drives Communication Cables

Need to communicate via Modbus RTU to a drive or a network of drives?

ZIPLink cables are available in a wide range of configurations for connecting to PLCs and SureServo, SureStep, Stellar Soft Starter and AC drives. Add a **ZIP**Link communications module to quickly and easily set up a multidevice network.

Using the Drives Communication selector tables located in this section,

- 1. Locate your Drive and type of communications.
- 2. Select a **ZIP**Link cable and other associated hardware.





Wiring Solutions

Solution 4: Serial Communications Cables

ZIPLink offers communications cables for use with DirectLOGIC, CLICK, and Productivity3000 CPUs, that can also be used with other communications devices. Connections include a 6-pin RJ12 or 9-pin, 15-pin and 25-pin D-sub connectors which can be used in conjunction with the RJ12 or D-Sub Feedthrough modules.

Using the Serial Communications Cables selector table located in this section,

- 1. Locate your connector type
- 2. Select a cable.



Solution 5: Specialty ZIPLink Modules

For additional application solutions, **ZIP**Link modules are available in a variety of configurations including stand-alone relays, 24VDC and 120VAC transorb modules, D-sub and RJ12 feedthrough modules, communication port adapter and distribution modules, and SureServo 50-pin I/O interface connection.

Using the **ZIP**Link Specialty Modules selector table located in this section,

- 1. Locate the type of application.
- 2. Select a **ZIP**Link module.



Solution 6: ZIPLink Connector Modules to 3rd Party Devices

If you need a way to connect your device to terminal blocks without all that wiring time, then our pigtail cables with color-coded soldered-tip wires are a good solution. Used in conjunction with any compatible **ZIP**Link Connector Modules, a pigtail cable keeps wiring clean and easy and reduces troubleshooting time.

Using the Universal Connector Modules and Pigtail Cables table located in this section,

- 1. Select module type.
- 2. Select the number of pins.
- 3. Select cable.





CPU I/O Modules to ZIPLink Connector Modules - Productivity3000®

Produ	Productivity3000 CPU Input Module ZIPLink Selector				
CP	U	ZIPLink			
Input Module	# of Terms	Component	Module Part No.	Cable Part No.	
P3-08NAS	20	Feedthrough		ZL-P3-CBL20 *	
P3-08ND3S	20	Feedthrough	ZL-RTB20	ZL-P3-UBLZU	
P3-16NA	20	Feedthrough	ZL-RIB20	ZL-P3-CBL20-1L ZL-P3-CBL20-2L	
P3-16ND3	20	Feedthrough			
P3-10NU3		Sensor	ZL-LTB16-24-1		
P3-32ND3	40	Feedthrough	ZL-RTB40		
F3-32ND3 40	40	Sensor	ZL-LTB32-24-1	ZL-CBL40 ZL-CBL40-1	
P3-64ND31	40	Feedthrough	ZL-RTB40	ZL-CBL40-1 ZL-CBL40-2	
F 0-04ND01	40	Sensor	ZL-LTB32-24-1		

Productivity3000 CPU Analog In Module ZIPLink Selector				
CP	U		ZIPLink	
Analog Module	# of Terms	Component	Module	Cable
P3-04ADS	20	Feedthrough		
P3-08AD	20	Feedthrough	ZI DTD20	ZL-P3-CBL20
P3-16AD-1	20	Feedthrough	ZL-RTB20	ZL-P3-CBL20-1L
P3-16AD-2	20	Feedthrough		
<u>P3-08RTD</u> ²	Matched Only	See Note 2		
<u>P3-08THM</u> ²	T/C Wire Only	See Note 2		
<u>P3-04DA</u>	20	Feedthrough		
P3-08DA-1	20	Feedthrough		
P3-08DA-2	20	Feedthrough		
P3-16DA-1	20	Feedthrough	ZL-RTB20	ZL-P3-CBL20-1L ZL-P3-CBL20-2L
P3-16DA-2	20	Feedthrough		ZL-1 3-ODLZ0-ZL
P3-8AD4DA-1	20	Feedthrough		
P3-8AD4DA-2	20	Feedthrough		

Productivity3000 CPU Specialty Module ZIPLink Selector					
CI	CPU ZIPLink				
Input Module	# of Terms	Component Module Part No. Cable Part No.			
P3-HSI				ZL-CBL40-S	
P3-HSO	40	Feedthrough	ZL-RTB40	ZL-CBL40-1S ZL-CBL40-2S	



Note: **ZIP**Link Connector Modules specifications follow the Compatibility Matrix tables. **ZIP**Link Cables specifications are at the end of this **ZIP**Link section.

Productivity3000 CPU Output Module ZIPLink Selector				
CF	CPU ZIPLink			
Output Module	# of Terms	Component	Module Part No.	Cable Part No.
P3-08TAS	20	Feedthrough		ZL-P3-CBL20 *
P3-08TD1S	20	Feedthrough		ZL-P3-CBL20-1L
P3-08TD2S	20	Feedthrough		ZL-P3-CBL20-2L
P3-08TRS	20	Feedthrough	ZL-RTB20	
P3-16TA	20	Feedthrough		
F 3-101A	20	Fuse		
		Feedthrough		
P3-16TD1	20	Fuse	ZL-RFU20 ⁴	
		Relay (sinking)	ZL-RRL16-24-1	ZL-P3-CBL20
	20	Feedthrough	ZL-RTB20	ZL-P3-CBL20-1 ZL-P3-CBL20-2
P3-16TD2		Fuse	ZL-RFU20 ⁴	
		Relay (sourcing)	ZL-RRL16-24-2	
P3-16TR	20	Feedthrough	ZL-RTB20	
7 0-101N	20	Fuse	ZL-RFU20 ⁴	
P3-08TRS-1 ³	20	Feedthrough	ZL-RTB20	
<u> </u>	20	Fuse	ZL-RFU20 ⁴	
P3-32TD1	40	Feedthrough	ZL-RTB40	
10-02101	40	Fuse	ZL-RFU40 ⁴	
P3-32TD2	40	Feedthrough	ZL-RTB40	
10-02102	40	Fuse	ZL-RFU40 ⁴	ZL-CBL40 ZL-CBL40-1
P3-64TD1 ¹	40	Feedthrough	ZL-RTB40	ZL-CBL40-1 ZL-CBL40-2
10-04101	70	Fuse	ZL-RFU40 ⁴	
P3-64TD2 ¹	40	Feedthrough	ZL-RTB40	
<u> </u>	40	Fuse	ZL-RFU40 ⁴	

- * Select the cable length by replacing the * with: Blank = 0.5m, -1 = 1.0m,
- 1 The P3-64ND3, P3-64TD1 and P3-64TD2 modules have two 32-point connectors and require two ZIPLink cables and two ZIPLink connector modules.
- 2 These modules are not supported by the ZIPLink wiring system.
- 3 The P3-08TRS-1 output module is derated not to exceed 2A per point maxiumum when used with the ZIPLink wiring system.
- 4 Note: Fuses (5 x 20 mm) are not included. See Edison Electronic Fuse section for (5 x 20 mm) fuse. S500 and GMA electronic circuit protection for fast-acting maximum protection. S506 and GMC electronic circuit protection for time-delay performance, Ideal for inductive circuits.

To ensure proper operation, do not exceed the voltage and current rating of ZIPLink module. ZL-RFU20 = 2A per circuit; ZL-RFU40 = 400 mA per circuit.



I/O Modules

A variety of discrete, analog and specialty I/O modules are available for use in local, expansion, and remote I/O bases. Specifications for each module are on the following pages.

A filler module is available for unused I/O module slots (part number <u>P3-FILL</u>).

Discrete Input Modules

Productivity3000 Discrete Input Modules				
Part Number	Part Number Of Inputs Description		Price	
P3-16SIM	16	Input Simulator Module	\$197.00	
P3-08ND3S	8	Isolated Sinking/Sourcing DC Input	\$99.00	
P3-16ND3	16	Sinking/Sourcing DC Input	\$152.00	
P3-32ND3	32	Sinking/Sourcing DC Input	\$208.00	
P3-64ND3	64	Sinking/Sourcing DC Input	\$260.00	
P3-08NAS	8	Isolated AC Input	\$126.00	
P3-16NA	16	AC Input	\$159.00	

^{*}ZIPLink required.

Analog I/O Modules

Productivity3000 Analog Input Modules				
Part Number	Price			
P3-04ADS	4	Isolated Analog Input	\$724.00	
P3-08AD	8	Analog Input	\$393.00	
P3-16AD-1	16	Analog Input (Current)	\$535.00	
P3-16AD-2	16	Analog Input (Voltage)	\$524.00	
P3-08RTD	8	Analog RTD Input	\$581.00	
P3-08THM	8	Analog Thermocouple Input	\$736.00	

Productivity3000 Analog Output Modules				
Part Number	lumber Number of Channels Description		Price	
P3-04DA	4	Analog Output	\$449.00	
P3-08DA-1	8	Analog Output (Current)	\$779.00	
P3-08DA-2	8	Analog Output (Voltage)	\$725.00	
P3-16DA-1	16	Analog Output (Current)	\$929.00	
P3-16DA-2	16	Analog Output (Voltage)	\$911.00	

Productivity3000 Analog Input/Output Modules				
Part Number Number of Channels Description Price				
P3-8AD4DA-1	8/4	Analog Input/Output (Current)	\$598.00	
P3-8AD4DA-2	8/4	Analog Input/Output (Voltage)	\$617.00	

Specialty Modules

Productivity3000 Specialty Modules					
Part Number of Channels Description Price					
P3-HSI	2	High-Speed Pulse Input	\$563.00		
P3-HS0*	2	High-Speed Output	\$587.00		
P3-SCM	4 ports	Serial Communications Module	\$475.00		

^{*}ZIPLink required.

Discrete Output Modules

Productivity3000 Discrete Output Modules			
Part Number	Number of Outputs	Description	Price
P3-08TD1S	8	Isolated Sinking Output	\$135.00
P3-08TD2S	8	Isolated Sourcing Output	\$141.00
P3-16TD1	16	Sinking Output	\$162.00
P3-16TD2	16	Sourcing Output	\$167.00
P3-32TD1*	32	Sinking Output	\$208.00
P3-32TD2*	32	Sourcing Output	\$208.00
P3-64TD1*	*64	Sinking Output	\$280.00
P3-64TD2*	*64	Sourcing Output	\$265.00
P3-08TAS	8	Isolated AC Output	\$177.00
P3-16TA	16	AC Output	\$210.00
P3-08TRS	8	Isolated Relay Output	\$159.00
P3-08TRS-1	8	Isolated Relay Output	\$194.00
P3-16TR	16	Relay Output	\$177.00

*ZIPLink required.


Module Installation Procedure



WARNING: DO NOT APPLY FIELD POWER UNTIL THE FOLLOWING STEPS ARE COMPLETED. SEE HOT-SWAPPING PROCEDURE FOR EXCEPTIONS.


Step One: Align circuit card with slot and press firmly to seat module into connector.

Step Two: Pull top and bottom locking tabs toward module face. Click indicates lock is engaged.



Step Three: Attach field wiring using optional terminal block or **ZIP**Link wiring system and install cover.



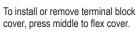



WARNING: EXPLOSION HAZARD – DO NOT CONNECT OR DISCONNECT CONNECTORS OR OPERATE SWITCHES WHILE CIRCUIT IS LIVE UNLESS THE AREA IS KNOWN TO BE NON-HAZARDOUS. DO NOT HOT-SWAP MODULES UNLESS THE AREA IS KNOWN TO BE NON-HAZARDOUS.